



Ś

Insert a screw to hold each bracket in place and tighten with the wrench provided.




Plug the sensor into the back of the stand.

Place the device and sensor onto the stand.


12

14b

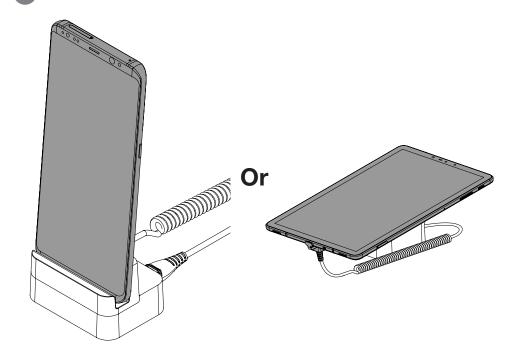




Plug the stand's power cable into the power supply. Plug the power supply into a power outlet.

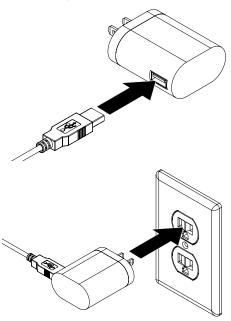


Removal:

14a

 Use the sensor removal bit (included with the AF6313 multitool) to press down on the release tab on the sensor to remove the sensor from the stand.

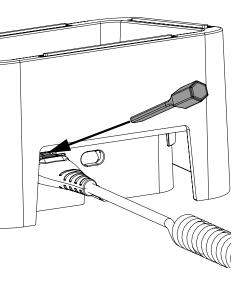



To remove the handheld stand, use the

scoop blade removal tool (DNTX93) to


break the adhesive bond between the

stand and the fixture. If removing the

hands and twist.

tablet version, grip the stand with both

To remove the sensor, use the scoop blade removal tool to carefully break the adhesive bond between the sensor and device. To prevent damage to the flex connector, insert the scraper removal tool from the top, as shown below. Push in the direction indicated to remove the sensor body. Unplug the power connector from the device

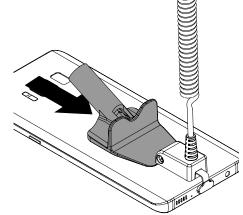

SD0688	Rev3	10/04/19



www.invue.com

NA / LATAM // 704.752.6513 • 888.55.INVUE EMEA // +31.23.8900150 APAC // +852.3127.6811

© 2019 InVue Security Products Inc. All rights reserved. InVue is a registered trademark of InVue Security Products.